



DESIGNS OF BREAKAGE (1)

S1 – in correspondence of the verticals
up to where the waterproofing arrives
in correspondence of the downspouts

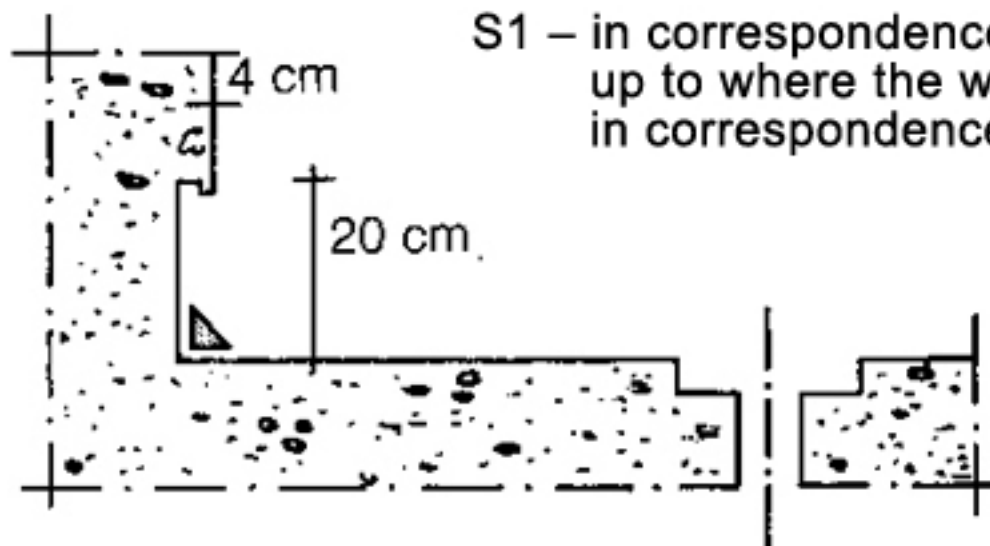

S2 – in correspondence of the flat joints
with thermal insulation

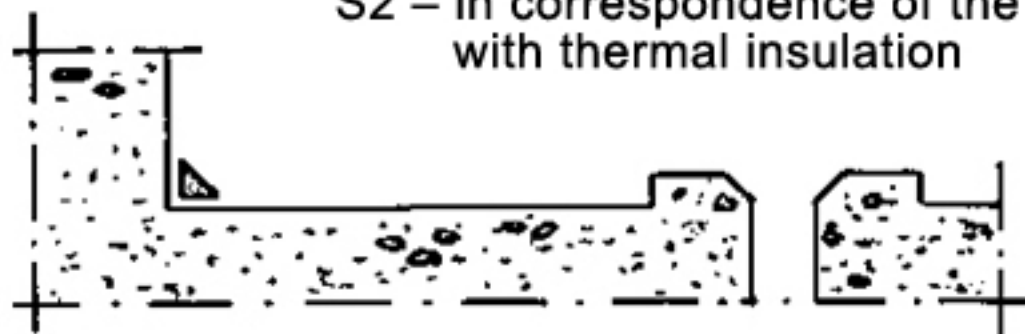

S3 – in correspondence of the
overflow tubes

